




Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

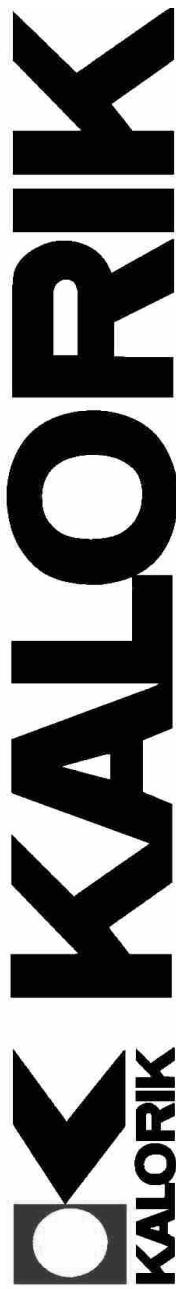

## **Pepper, Salt and Spice Mill Carousel**

**Molinillo Carrusel para  
sal, pimienta y especias**

**USK PPG 36584  
2.4V Rechargeable  
batteries with UL adapter**

[www.KALORIK.com](http://www.KALORIK.com)

↑  
Front cover page (first page)



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

## EN OPERATING INSTRUCTIONS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

### IMPORTANT SAFEGUARDS

*Please read these instructions carefully before using the appliance.*

**Important:** People (including children) who are not able to use the appliance in a safe way, due to their physical, sensorial or mental capacity or their lack of experience or knowledge, must never use the appliance except if they are supervised by a person responsible for their safety or if they previously received instructions concerning the safe use of the appliance.

Close supervision is necessary to prevent children from using the appliance as a toy.

- Never leave the appliance unsupervised when in use.
- From time to time check the appliance for damages. Never use the appliance if it shows any signs of damage. All repairs should be made by a qualified electrician.
- Only use the appliance for domestic purposes and in the way indicated in these instructions.
- Never immerse the appliance in water or any other liquid for any reason whatsoever.
- If the batteries leak, remove them, clean the contacts of the appliance and wash your hands.
- If you do not use the appliance for a long time, remove the batteries so that they do not leak.
- Only replace the rechargeable batteries with rechargeable batteries of the same type and rating (Ni-Mh type, AA size, 650mA)
- NEVER replace the rechargeable batteries with non-rechargeable batteries, as the appliance could catch fire.

### SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY


USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

## PARTS

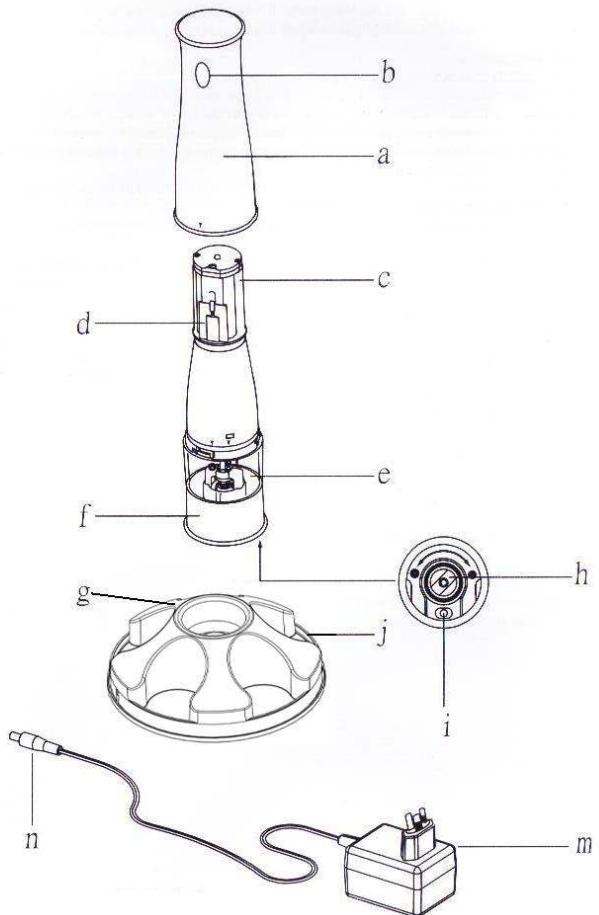

- a. Stainless Steel Housing
- b. Grind switch
- c. Rechargeable battery-pack
- d. Battery compartment
- e. Transparent spice container
- f. Container base
- g. Charging base / carousel
- h. Grind adjustment wheel (coarse/fine)
- i. LED light
- j. Adapter socket on base + pilot light
- m. Adapter (aspect can vary)
- n. Adapter plug

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**




## BEFORE USE

- This appliance runs on a battery pack of 2 x AA type rechargeable batteries. The batteries are pre-installed in the motor housing.
- If the original batteries need to be replaced later, open the batteries housing by sliding the 2 white tabs at the bottom of the motor housing towards the centre. Slide the motor block out to access the battery cavities.
- Do not replace the rechargeable batteries with non-rechargeable ones, as these could catch fire.
- If the rechargeable batteries need replacing, only do with a rechargeable battery pack of the same type and specifications (Ni-Mh type, AA size, 650mA)

### To fill in pepper or salt:

- Simply lift off the lid of each container and fill them with coarse sea salt, peppercorns or other spices suitable to be ground (fig. 4).
- Put the lid back in place to keep the content fresh and dry, until ready to grind.
- Do not fill the containers completely, for best performance.

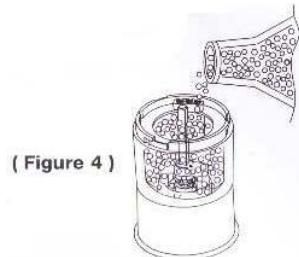

( Figure 4 )

## CHARGING

- Remove the grinder and components from the packaging.
- Plug the charger cord into the charging base, and plug charger into the socket
- With the socket for the adapter at the right back side, and the grind switch on the motor block position towards the front, place the motor block on the center of the base and **turn the motor block clockwise**, until it locks in place and a red pilot lights on the base lights up.
- Charging will take approx. 3-4 hours for the first time.
- For longer battery life, leave the grinder to charge for up to 8 hours continuously. Then unplug the adapter from the socket and discharge the batteries to the maximum before recharging.

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

- Please note: the transformer and stainless steel casing will become slightly hot when charging is completed. This is normal. It is recommended that you remove the grinder from its base and let it cool slightly before using, or that you disconnect the charger from the base when the appliance is fully charged (after 8 hours).


Note: Motor block can only charge if no spice container is attached to it.

## SPICE CONTAINERS

- Before seasoning your meals, you can adjust the fineness of the ground salt / peppercorns or spices, by turning the adjustment wheels on the underside of each container
- To do so, turn the wheel clockwise for a finer grind and counterclockwise for a coarser grind (fig. 5)
- Do not turn more than six turns from the finest position to avoid dismantling the adjustment wheel from the container.

Note: you can also use the spice containers to grind, manually, without the motor block. Just keep the lid on and turn the lid clockwise to grind (in this case the LED light will not light up)

(Figure 5)

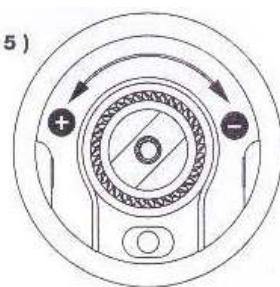

## ATTACHING THE SPICE CONTAINERS

- Remove the lid of the container that you want to use.
- Align the arrow on the stainless steel housing with the "Unlock" symbol on the container.
- Lock in place by turning the upper stainless steel part clockwise, until the arrow reaches the "Lock" symbol.
- Grind the desired quantity of spice.
- Proceed reversely to remove the spice container in place.



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**



## USE

- With a spice container attached to the motor block, hold the appliance above the meal to season.
- Press on the grind switch.
- A LED light underneath each mill enables you to see how much you are grinding, for a more precise seasoning.
- Interchange the spice containers at will, season to taste.

## MAINTENANCE

- Disassemble the different parts of the appliance (housing, containers, lids) and clean them separately with a damp cloth.
- Do not immerse the motor block in liquid or put it in a dishwasher.
- Do not use with wet hands.
- Do not use cleaning products or detergents.
- Only use with the adapter supplied or of the same type (Input: AC 110V 60Hz, Output: DC 5V 300mA)

## TROUBLESHOOTING

If the mill does not grind, or if no motor noise can be heard, please check that the batteries are not discharged. Recharge if necessary.

If the mill gets stuck during use [motor produces hum, but internal shaft does not turn and no pepper is ground], check the container is properly installed, then gently shake the mill or tap the mill gently on a hard surface, to remove the stuck pepper or salt.

To remove deeply stuck peppercorn, remove the upper lid as if for re-filling the mill, turn the coarseness setting to its coarsest, and tap lightly on a hard surface until all the peppercorn is released. Re-adjust coarseness setting to the desired level once done and replace upper lid.

Note: Too fine a grind setting may not enable salt or pepper to be ground. If the case, set the grinder to a coarser setting (see above).



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**



## PROTECTION OF THE ENVIRONMENT

In order to preserve our environment and protect human health, the waste electrical and electronic equipment should be disposed of in accordance with specific rules with the implication of both suppliers



and users. For this reason, as indicated by the symbol on the rating label or on the packaging, your appliance should not be disposed of as unsorted municipal waste. The user has the right to bring it to a municipal collection point performing waste recovery by means of reuse, recycling or use for other applications in accordance with the directive.

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

8

## WARRANTY

We suggest that you complete and return the enclosed Product Registration Card promptly to facilitate verification of the date of original purchase. However, return of the Product Registration Card is not a condition of these warranties. You can also fill this warranty card online, at the following address: [www.KALORIK.com](http://www.KALORIK.com)

This KALORIK product is warranted in the U.S.A. for 1 year from the date of purchase against defects in material and workmanship. This warranty is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance.

During this period, the KALORIK product that, upon inspection by KALORIK, is proved defective, will be repaired or replaced, at KALORIK's option, without charge to the customer. If a replacement product is sent, it will carry the remaining warranty of the original product.

This warranty does not apply to any defect arising from a buyer's or user's misuse of the product, negligence, failure to follow KALORIK instructions noted in the user's manual, use on current or voltage other than that stamped on the product, wear and tear, alteration or repair not authorized by KALORIK, or use for commercial purposes. There is no warranty for glass parts, glass containers, filter basket, blades and agitators, and accessories in general. There is also no warranty for parts lost by the user.

ANY WARRANTY OF MERCHANTABILITY OR FITNESS WITH RESPECT TO THIS PRODUCT IS ALSO LIMITED TO THE ONE YEAR LIMITED WARRANTY PERIOD.

Some states do not allow limitation on how long an implied warranty lasts or do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

8

If the appliance should become defective within the warranty period and more than 30 days after date of purchase, do not return the appliance to the store: often, our Consumer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, a Representative can confirm whether the product is under warranty and direct you to the nearest service location.

If this is the case, bring the product, or send it, postage prepaid by the user (all Kalorik customers are responsible for the initial shipment back to the warranty center), along **with proof of purchase** and indicating a **return authorization number** given by our Consumer Service Representatives, to the authorized KALORIK Service Center (please visit our website at [www.KALORIK.com](http://www.KALORIK.com) or call our Customer Service Department for the address of our authorized KALORIK Service Center).

If you send the product, please include a letter explaining the nature of the claimed defect.

If you have additional questions, please call our Consumer Service Department (please see below for complete contact information), Monday through Friday from 9:00am - 6:00pm (EST). Please note hours are subject to change.

If you would like to write, please send your letter to:

**KALORIK Consumer Service Department**  
Team International Group of America Inc.  
1400 N.W 159th Street, Suite 102  
Miami Gardens, FL 33169 USA

Or call:

Toll Free: +1 888-521-TEAM / +1 888-KALORIK

**Only letters can be accepted at this address above. Shipments and packages that do not have a return authorization number will be refused.**

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

## SP MANUAL DE INSTRUCCIONES

**Cuando se utilizan aparatos eléctricos, hay unas precauciones básicas de seguridad que siempre se deben seguir, tales como:**

### CONSEJOS DE SEGURIDAD

Lea detenidamente el modo de empleo antes de utilizar el aparato.

**Importante:** Las personas (incluidos niños) con incapacidades físicas, sensoriales o mentales, o sin experiencia o conocimiento nunca deben utilizar el aparato, salvo si están bajo la vigilancia de una persona responsable de su seguridad o si recibieron previamente instrucciones con respecto al uso seguro del aparato.

Es necesario vigilar a los niños para que no jueguen con el aparato.

- No deje nunca su aparato sin vigilancia cuando esté en marcha.
- Compruebe de vez en cuando que el aparato no esté dañado. Nunca utilice el aparato si está dañado. Todas las reparaciones deben ser hechas por un servicio técnico cualificado recomendado por el distribuidor.
- Utilice el aparato solamente para usos domésticos y de la manera indicada en este manual de instrucciones.
- No sumerja nunca el aparato en el agua o en cualquier otro líquido por ninguna razón.
- Antes de limpiar el aparato, quite siempre las pilas.
- Si las pilas gotean, quítelas, limpie los contactos del aparato y lávese las manos.
- Si no va a utilizar el aparato durante un largo periodo de tiempo, quite las pilas para que no gotee.
- Reemplace las baterías recargables únicamente con baterías recargables del mismo tipo y clase (Ni-Mh, AA, 650mA)
- Nunca reemplace las baterías recargables con baterías no recargables ya que el aparato podría incendiarse.

### GUARDE ESTAS INSTRUCCIONES SOLAMENTE PARA USO DOMESTICO


USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

## PARTES

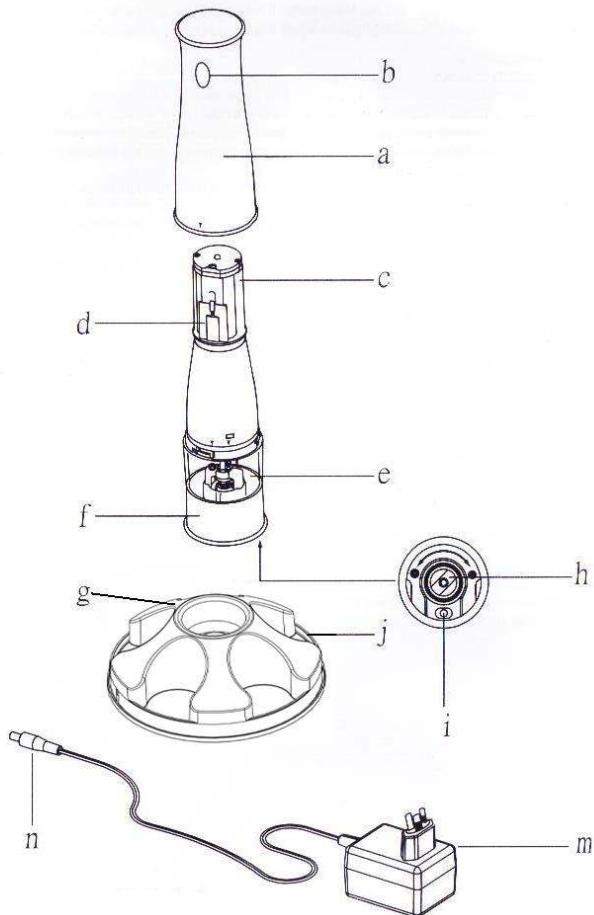

|                                    |   |
|------------------------------------|---|
| a. Cuerpo de acero inoxidable      | g. Base de carga / carrusel                 |
| b. Interruptor                     | h. Rueda ajuste del molido (grueso/fino)    |
| c. Batería recargable              | i. Luz LED                                  |
| d. Compartimiento de la batería    | j. Adaptador de enchufe en la base + piloto |
| e. Envase transparente de especias | m. Adaptador ( aspecto puede variar)        |
| f. Contenedor de base              | n. Conector del adaptador                   |

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**




## ANTES DE UTILIZAR EL APARATO

- Este aparato funciona con una caja de 2 pilas recargables, tipo AA.
- Si las baterías originales deben ser reemplazadas después, abrir la caja de baterías deslizando las 2 tapas blancas en la base del cuerpo motor hacia el centro. Deslice el cuerpo del motor para acceder a las cavidades de la batería.
- No reemplace las baterías por si mismo. Contacte un electricista calificado.
- No cambie las baterías recargables por no recargables, ya que podrían incendiarse.
- Si las baterías recargables necesitan ser cambiadas, que sea únicamente con un paquete de baterías recargables del mismo tipo y especificaciones (Ni-Mh, tipo AA, 650mA)

### Para llenar de pimienta o sal

- Basta con levantar la tapa de cada recipiente y llenarlos con sal marina, granos de pimienta de otros condimentos adecuados para moler (fig. 4).
- Ponga la tapa en su lugar para mantener el contenido fresco y seco, hasta que esté listo para moler.
- No llene los envases por completo, para un mejor funcionamiento.

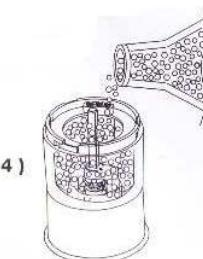

(Figure 4)

## CARGA

- Retire el molinillo y sus componentes de la caja.
- Conecte el cable del cargador en la base de carga, y enchufe el adaptador.
- Con la toma de corriente para el adaptador en la parte trasera derecha, y el interruptor de molido del bloque motor hacia el frente, colocar el bloque motor en el centro de la base y gire el motor hacia la derecha hasta que encaje en su lugar y un testigo luminoso rojo se encienda.

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

- La primera carga durará aproximadamente. 3-4 horas
- Para una mayor duración de batería, deje cargar el molinillo hasta 8 horas seguidas. A continuación, desenchufe el adaptador de la toma y descarga las baterías al máximo antes de recargarla.
- Tenga en cuenta que el transformador y la caja de acero inoxidable se calentarán ligeramente cuando la carga este completa. Esto es normal. Se recomienda quitar el molinillo de su base y dejar que se enfrie un poco antes de usar, o que desconecte el cargador de la base cuando el aparato está completamente cargado (después de 8 horas).


Nota: El bloque del motor sólo pueden cargarse si ningún envase esta unido.

## ENVASES DE ESPECIAS

- Antes de sazonar sus preparaciones, puede ajustar el tamaño de la sal, de la pimienta o de las especias girando la rueda que está debajo de cada envase.
- Por ello, gire la rueda en el sentido de las agujas del reloj para granos más finos o en el sentido contrario para granos más gruesos (fig.5).
- No gire más de 6 vueltas desde la posición mas fina para evitar que la rueda se desmonte del envase.

Nota: también puede usar los envases para moler manualmente las especias sin el bloque motor. Sujete de la tapa y gire hacia la derecha (en este caso, la luz LED no se enciende)

(Figure 5)

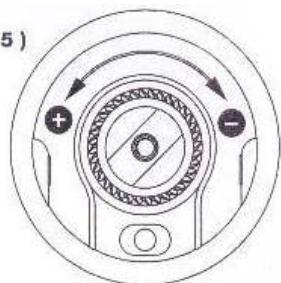

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**



## COLOCACIÓN DE LOS ENVASES

- Retire la tapa del envase que desee utilizar.
- Alinear la flecha del cuerpo de inoxidable con el símbolo "desbloqueo" en el envase.
- Cierre girando la parte superior de acero inoxidable hacia la derecha hasta que la flecha llegue al símbolo de "bloqueo".
- Muela la cantidad deseada de especias.
- Proceder en orden inverso para retirar el envase de su lugar.

## USO

- Con un envase unido al bloque motor, mantenga el aparato sobre la comida que quiera condimentar.
- **Pulse el interruptor de moler.**
- La luz LED bajo cada molinillo le permite ver la cantidad que esta moliendo, para un condimento más preciso.
- Intercambie los envases a voluntad, y sazone al gusto.

## MANTENIMIENTO

- Desmonte las diferentes partes del aparato (cuerpo, envases, tapas) y límpielas de manera separada con un pañuelo húmedo.
- No sumerja el bloque motor en agua u otro líquido, ni lo ponga en el lavavajillas.
- No lo use con las manos mojadas.
- No utilice productos de limpieza o detergentes.
- Utilice con adaptador AC 110V 60Hz / DC 5V 300mA



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**



## SOLUCIÓN DE PROBLEMAS

Si el molinillo no muele, o si no oye el ruido del motor, compruebe que las pilas estén instaladas correctamente y no estén gastadas. Para obtener mejores resultados se recomienda usar pilas alcalinas.

Si el molinillo se atasca durante el uso (se oye el zumbido del motor, pero el eje interior no gira y no se muele la pimienta), agítelo suavemente o dé un ligero golpe sobre el molinillo sobre una superficie dura, para quitar el grano de pimienta o sal atascado.

Para eliminar los granos de pimienta profundamente atascados, retire la tapa superior como si fuera a llenar de nuevo el molinillo, gire a la configuración más gruesa del molido de los granos, remueva o saque la pimienta, y si no sale golpee ligeramente sobre una superficie dura hasta que salga. Vuelva a ajustar el granulado deseado y cierre la tapa.

Nota: una posición de molido demasiado fina puede impedir que la pimienta o la sal sea molida. En este caso use una posición de molido menos fino.

## PROTECCIÓN DEL MEDIO AMBIENTE

Para poder preservar nuestro medio ambiente y proteger la salud humana, los residuos eléctricos y equipos electrónicos deberían ser destruidos de acuerdo con unas normas específicas con la implicación de ambos

proveedores y consumidores. Por esta razón, como indica el símbolo  en la placa de datos técnicos, su aparato no debería ser tirado en un contenedor municipal sino que debería ser devuelto a la tienda, o dejado en un punto de recolección para ser reciclado o usado para otras aplicaciones conforme a la directiva.

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

8

## GARANTÍA

Le sugerimos rellenen y nos envíen rápidamente la Tarjeta de Registro de Producto adjunta para facilitar la verificación de la fecha de compra. Por lo tanto, la devolución de esa Tarjeta de Registro de Producto no es una condición imprescindible para la aplicación de esa garantía. Puede también llenar dicha tarjeta de garantía en línea en la dirección siguiente: [www.KALORIK.com](http://www.KALORIK.com)

A partir de la fecha de compra, este producto KALORIK está garantizado un año contra los defectos materiales y de fabricación, en los Estados Unidos. Esta garantía no es transferible. Conserve la prueba de compra original. Se exige una prueba de compra para obtener la aplicación de la garantía.

Durante este período, si el producto KALORIK después de una inspección por parte de KALORIK, se manifiesta defectuoso, será reparado o reemplazado, según lo que decida KALORIK, sin gastos para el consumidor. Si se envía un producto de reemplazo, se aplicará la garantía que queda del producto original.

Esta garantía no se aplica a los defectos causados por una mala utilización por parte del comprador o del usuario, o una negligencia al no respeto del manual de instrucciones KALORIK, o una utilización en un circuito eléctrico cuyo voltaje es diferente al que figura en el producto, o un desgaste normal, o modificaciones o reparaciones no autorizadas por KALORIK, o por un uso con fines comerciales. No existe garantía por las partes de cristal, jarras de cristal, filtros, cestos, cuchillas y accesorios en general. No existe tampoco garantía por las piezas perdidas por el usuario.

Toda garantía de valor comercial o de adaptabilidad a este producto está limitada a un año también.

Algunos estados no ponen límites a la duración de la garantía tácita o no autorizan la exclusión de daños y perjuicios accesorios o indirectos, por lo que puede que las restricciones anteriormente mencionadas no le sean aplicables a Usted. Esta garantía le otorga derechos legales particulares, pero usted puede tener también otros

USK PPG 36584 - 110622



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

8

derechos que varían de un estado a otro y algunos derechos pueden variar de un estado a otro.

Si el aparato tuviera un defecto durante el periodo de garantía y / o más de 30 días después de que se compró, no devuelva el aparato en la tienda donde le compró: a menudo, nuestro Servicio al Consumidor puede ayudar a resolver el problema sin que el producto tenga que ser reparado. Si hace falta una reparación, uno de nuestros representantes puede confirmar si el producto está bajo garantía y dirigirle al servicio post-venta más próximo.

Si fuera el caso, traiga el producto (o envíelo, correctamente franqueado) con la **prueba de compra** que mencione **el número de autorización de devolución** indicado por nuestro Servicio al Consumidor, al servicio post-venta KALORIK más próximo. (Visite nuestra web [www.KALORIK.com](http://www.KALORIK.com) o llame al Servicio al Consumidor para obtener la dirección del Servicio post-venta KALORIK exclusivo más próximo).

Si envía el producto, le rogamos añadan una carta explicando la naturaleza del defecto.

Si tiene preguntas adicionales, por favor llame al Servicio al Consumidor (véase abajo para los datos completos), de lunes a viernes, de las 9 a las 18 (EST). Note que las horas pueden ser modificadas.

Si quiere escribirnos, puede hacerlo a la dirección siguiente:

**KALORIK Servicio al Consumidor**

Team International Group of America Inc.  
1400 N.W 159th Street, Suite 102  
Miami Gardens, FL 33169 USA

O llame gratuitamente (U.S.A.) al +1 888-521-TEAM / +1 888-KALORIK


**Las cartas se aceptan solamente en la dirección anteriormente mencionada. Los envíos y paquetes que no tengan número de autorización de devolución serán rechazados.**



Fax +32 2 359 95 50

Copies of the I/B. Please reproduce them without any changes except under special instruction from Team International BELGIUM. The pages must be reproduced and folded in order to obtain a booklet A5 (+/- 148.5 mm width x 210 mm height). When folding, make sure you keep the good numbering when you turn the pages of the I/B. Don't change the page numbering. Keep the language integrity. **Print only what is inside the frame.**

8

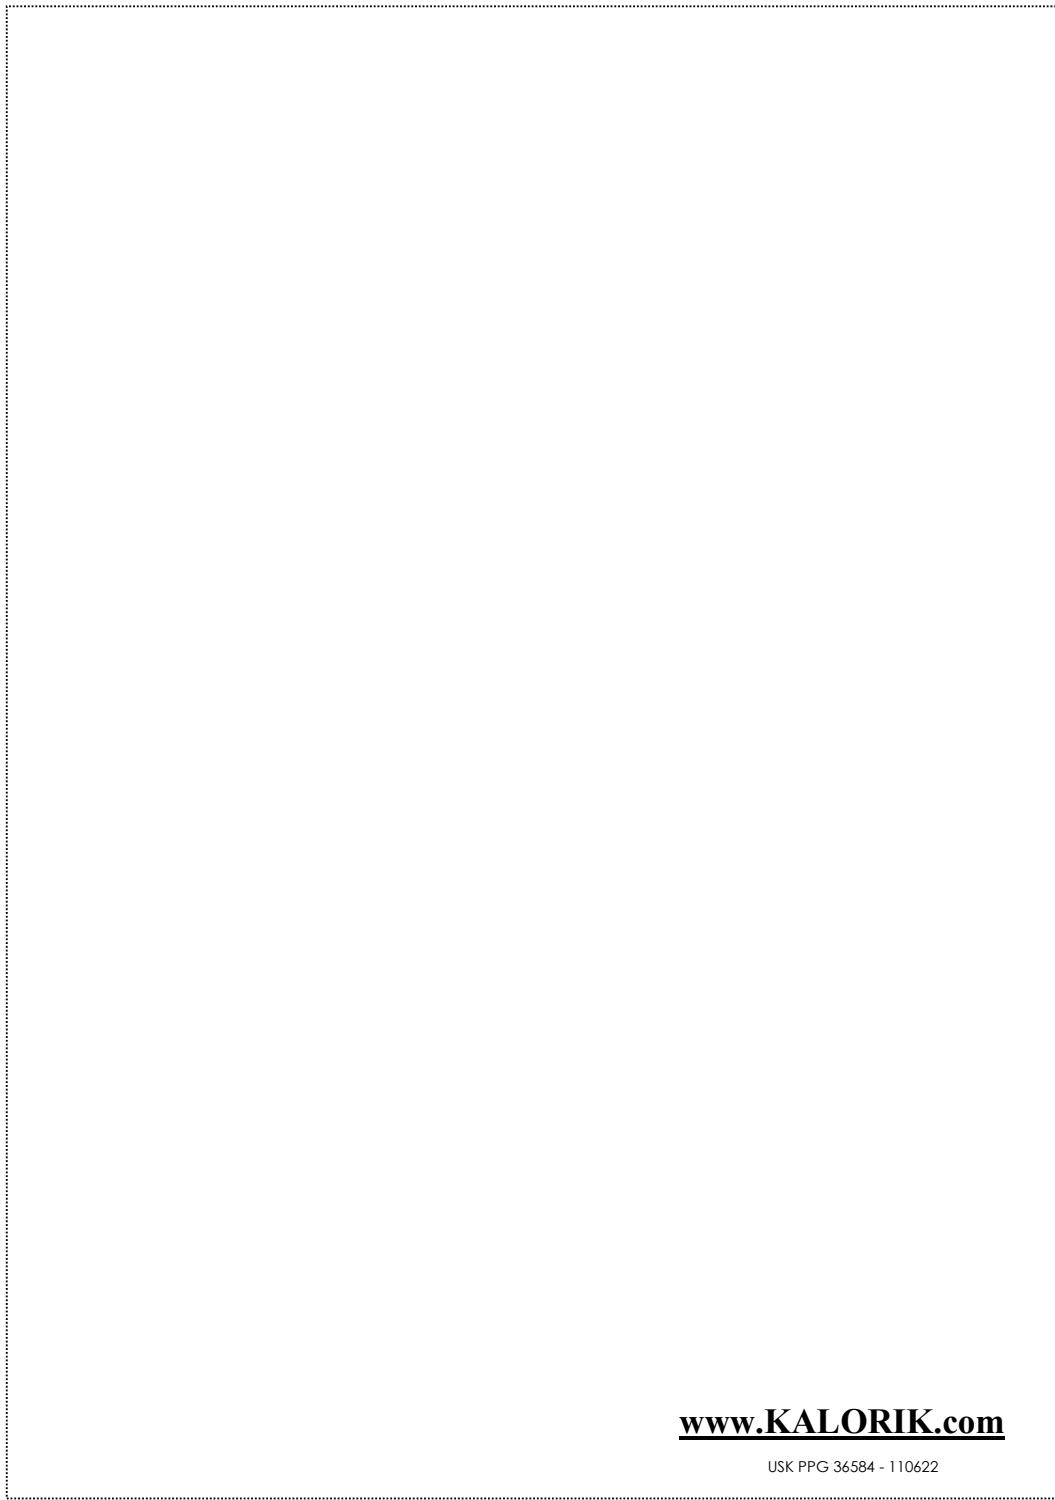

**www.KALORIK.com**

USK PPG 36584 - 110622